


### 1 Przeznaczenie i budowa

Przepływomierz elektroniczny przeznaczony jest do współpracy ze sterownikiem typu GH26 lub G422.

Przepływomierz służy do pomiaru przepływu nośnika ciepła.

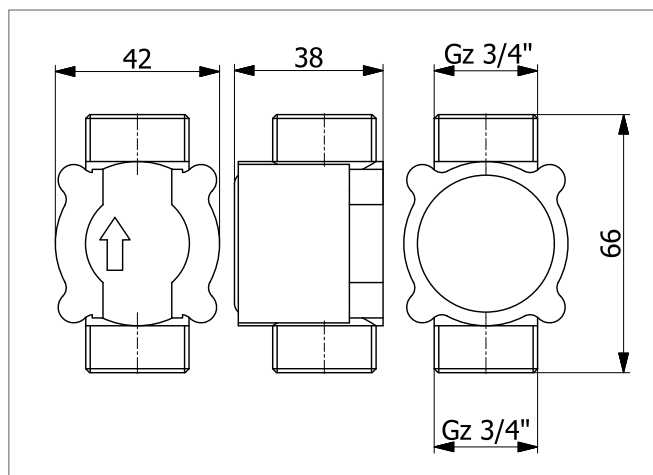


### 2 Parametry Pracy

|                              |                   |
|------------------------------|-------------------|
| Zakres pomiarowy przepływu   | 1 - 60 l/min.     |
| Ilość impulsów               | 350 impulsów/litr |
| Maksymalne ciśnienie robocze | 10 bar            |
| Napięcie robocze             | 3 - 24 VDC        |

### 3 Montaż



Przepływomierz montować bezpośrednio na rurociągu pod grupą pompową lub pompą obiegową. Strzałka na obudowie oznacza kierunek przepływu czynnika w obiegu.

**Uwaga:** W zestawach solarnych Komfort Plus na przepływomierz nakręcony jest wstępnie Śrubunek GW 3/4" x GW 3/4". Po zamontowaniu do grupy pompowej dokręcić połączenie Śrubunek – Przepływomierz.


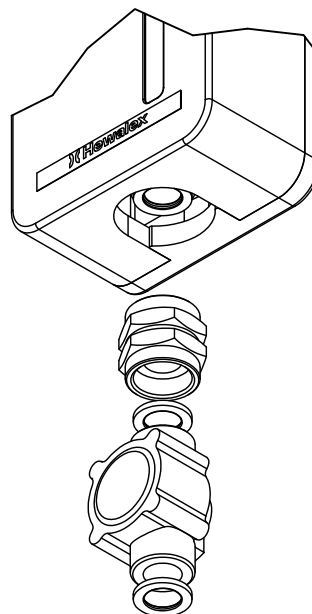


### 4 Schemat podłączenia

#### STEROWNIK G422

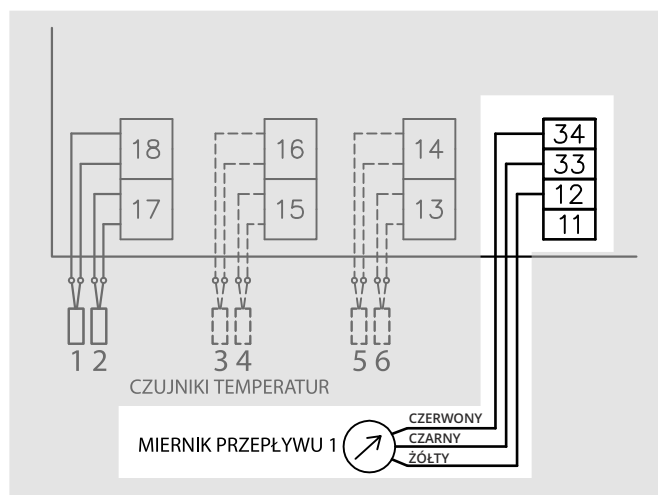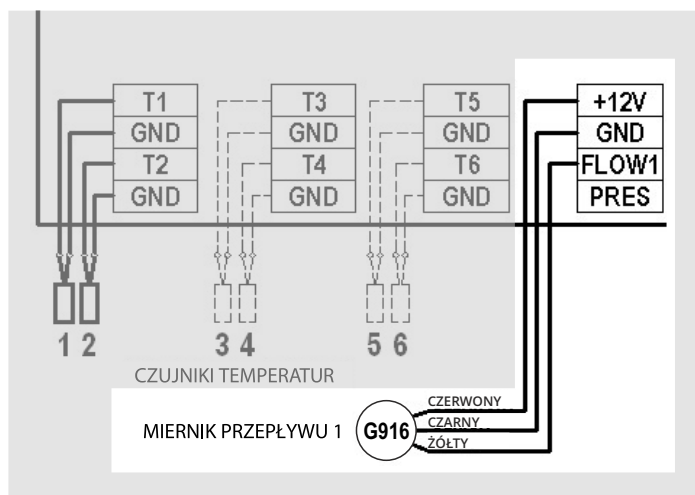


## STEROWNIK GH26

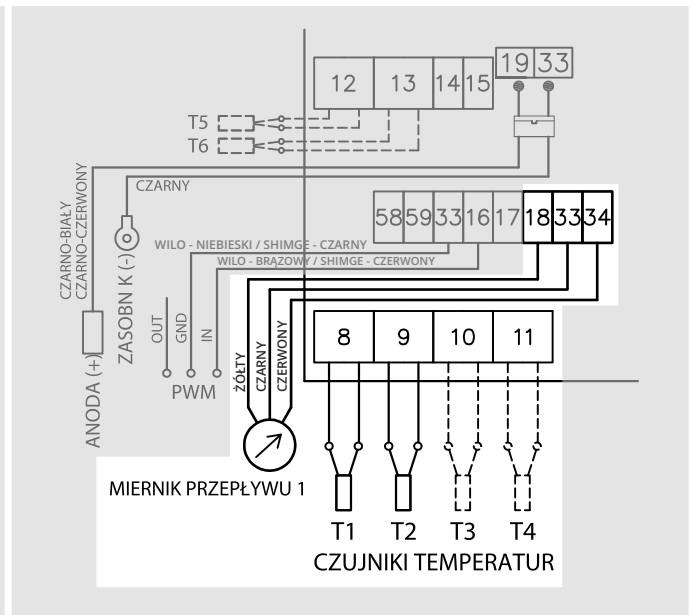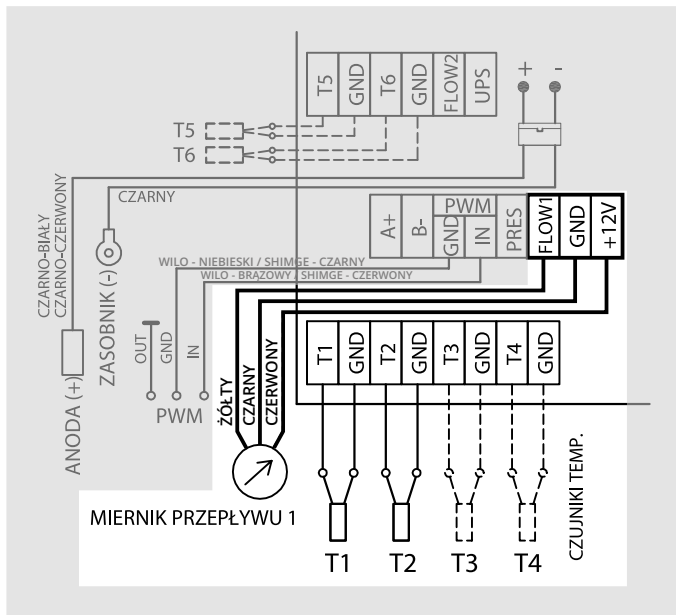

### 1 Purpose and construction

The electronic flowmeter is designed to work with the GH26 or G422 controller.

The flowmeter measures the flow of the heat carrier.

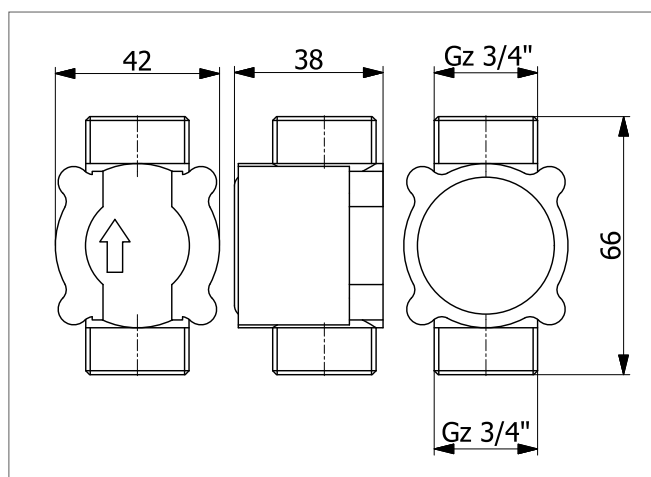


### 2 Operate Parameters

|                          |                 |
|--------------------------|-----------------|
| Flow range               | 1- 60 l/min     |
| Puls number              | 350 pulse/liter |
| Maximum working pressure | 10 bar          |
| Working voltage          | 3 - 24 VDC      |

### 3 Installation



Install the flow meter directly on the pipeline under the pump group or circulation pump. The arrow on the housing indicates the direction of the medium flow in the circuit.

**Note:** In the Comfort Plus solar kits, the flow meter is pre-fitted with a 3/4" in. male × 3/4" in male union pipe fitting. Tighten the union – flow meter connection after fitting to the pump group.

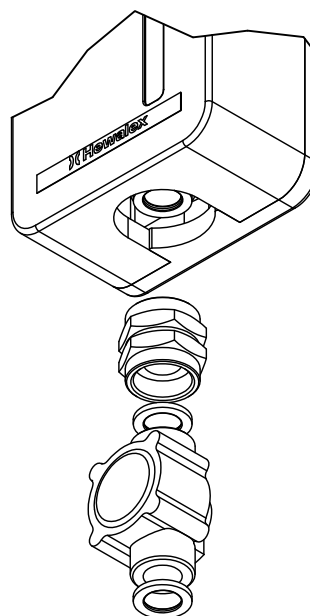

### 4 Diagram of connecting

#### CONTROLLER G422

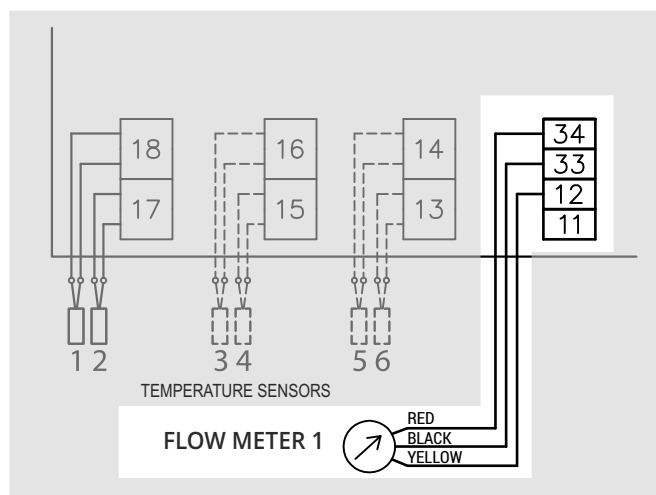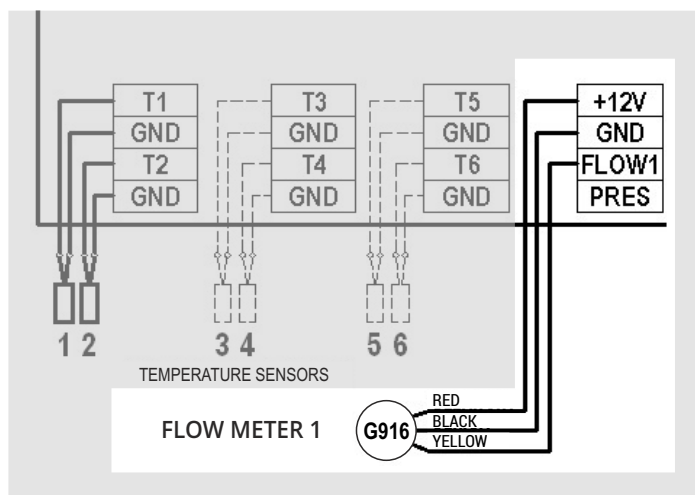

## CONTROLLER GH26

